Print on plain white paper - Part # 122919

INSTALLATION INSTRUCTIONS

"J" Box Retro-Fit Kit #153274

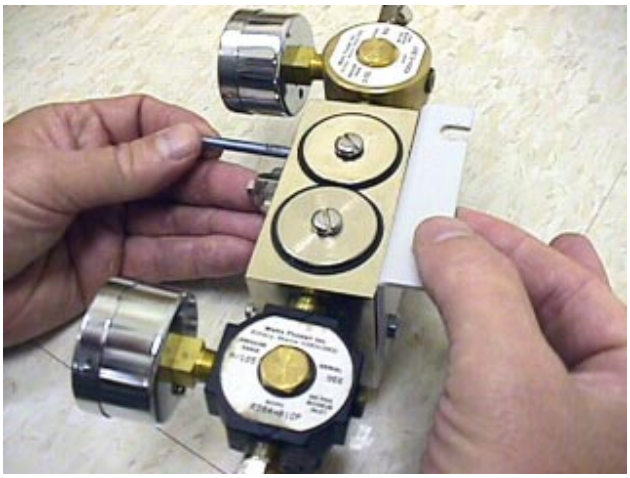

Figure 1
Assemble the valve block to the bracket using the machine screws and nuts provided.

Figure 2
Mount the valve block in the "J" box as shown using the square nuts and screws provided.

Figure 3
Insert the umblical in the "J" box and slide the clamp on the umblical as shown.

Figure 4
Figure 4 shows the umblical and clamp installed in the "J" box.

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542